











## What to do if... What to do if...

	A tire punctures	P. 536/ 546	If you have a flat tire
	The hybrid system does not start	P. 96 P. 547 P. 553	Immobilizer system If the hybrid system will not start If the 12 volt battery is discharged
	The shift lever cannot be moved out	P. 548	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 557	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 549	If you lose your keys
	The 12 volt battery runs out	P. 553	If the 12 volt battery is discharged
	The doors cannot be locked	P. 54	Doors
	The horn begins to sound	P. 98	Alarm
	The vehicle is stuck in mud or sand	P. 560	If the vehicle becomes stuck



The warning light or indicator light comes on

P. 510

If a warning light turns on or a warning buzzer sounds...



# Warning lights



Brake system warning light



P. 510



Malfunction indicator lamp



P. 511



ABS warning light



P. 511



Driver's seat belt reminder light

P. 512



Front passenger's seat belt reminder light

P. 512



ECB\* warning light

P. 511



Tire pressure warning light

P. 512



Low fuel level warning light

P. 512



Electric power steering warning light

P. 511



SRS warning light

P. 511



Pre-collision system warning light

P. 511



Open door warning light

P. 512



Slip indicator

P. 511



Charging system warning light

P. 510



Master warning light

P. 513

\*: Electronically Controlled Brake System

## What to do if...



The warning message is displayed

P. 519

If a warning message is displayed

What to do if...

